

# CF03

## Ducati Multistrada 1200 (10-14)

### Kit for the left side


ID	Description	Cat.no.	pcs
1	Crash frame		1
2	Dural roller 28mm	1206	1
3	Dural roller 37mm	1207	1
4	Dural roller 40mm	1205	1
5	Screw M10x60	850	1
6	Screw M10x70	851	1
7	Washer M10 – plochá	804	2
8	Washer M12 – plochá	803	1
9	Nut M12 – pojistná	811	1
10	Steel rod 12x355x30x30		1

### Kit for the right side

ID	Description	Cat.no.	pcs
1	Crash frame		1
2	Dural roller 28mm	1206	1
3	Dural roller 37mm	1207	1
4	Dural roller 40mm	1205	1
5	Screw M10x60	850	1
6	Screw M10x70	851	1
7	Washer M10 – plochá	804	2
8	Washer M12 – plochá	803	1
9	Nut M12 – pojistná	811	1

## Installation

(we recommend to use medium strong glue on all threads)

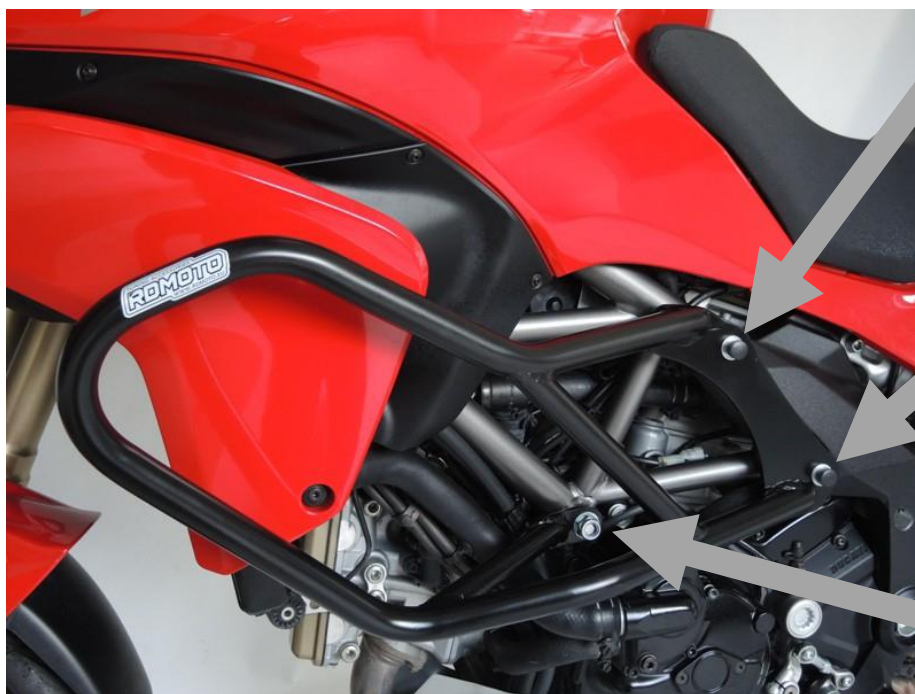

dural roller 28mm (ID2) +  
screw M10x60 (ID5) +  
washer M10 (ID7)

dural roller 37mm (ID3) +  
screw M10x70 (ID6) +  
washer M10 (ID7)

Steel rod (ID10) +  
dural roller 40mm (ID4) +  
nut M12 (ID9) +  
washer M12 (ID8)