

CF110-PH01

KTM 790 Duke 2018-2019

KTM 890 Duke 2020-


Kit for Left Side			
ID	Description	Cat.No.	Pcs
1	Frame	CF110	1
2	Steel burn out	X113	1
3	Bolt M10x60mm	1048	2
4	Dural. roller d=8mm	1334	1
5	Bolt M10x55mm	1002	1
6	Dural. roller d=10mm	111	1
7	Washer flat M10	804	3
8	Plastic cover M10	X4	1
9	Bolt M10x80mm	853	1
10	Dural. roller d=13mm	1279	1
11	Dural. roller d=23mm	1278	1
12	Hexagon bolt M8x25	815	1
13	Bolt M10x65mm	943	1
14	Sticker RDmoto		1
15	Dural. roller d=70mm	1280	1
16	Silentblock	X34	1
17	Protector PVPKN	0/16	1
18	Washer flat M8	802	1
19	Dural. protektor insert	X131	1

Kit for Right Side			
ID	Description	Cat.No.	Pcs
1	Frame	CF110	1
2	Steel burn out	X113	1
3	Bolt M10x60mm	1048	2
4	Dural. roller d=8mm	1334	1
5	Bolt M10x55mm	1002	1
6	Dural. roller d=8mm	111	1
7	Washer flat M10	804	3
8	Plastic cover M10	X4	1
9	Dural. roller d=39mm	1304	1
10	Dural. roller d=25mm	1277	1
11	Hexagon bolt M8x25	815	1
12	Bolt M10x65	943	1
13	Sticker RDmoto		1
14	Dural. roller d=70mm	1280	1
15	Silentblock	X34	1
16	Protector PVPKN	0/16	1
17	Washer flat M8	802	1
18	Dural. protektor insert	X131	1

We recommend using medium strenght thread glue during assembly.


Installation Instructions:

- 1) First, mount the steel burn outs on both sides (same bolts +rollers on left and right side)**

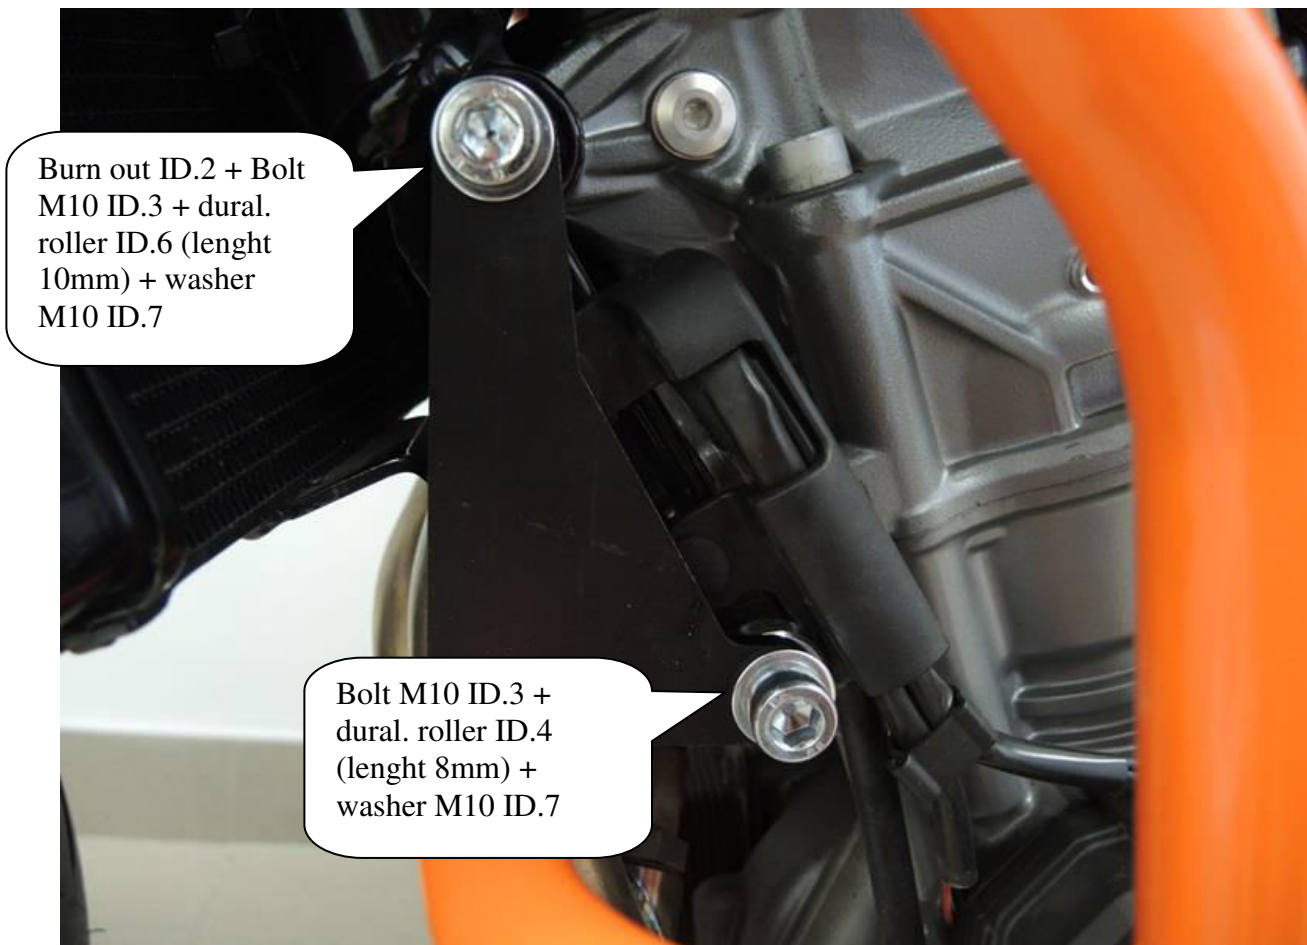

- 2) Then, mount the protectors and roller with silent block onto the frame (same on both sides)**
- 3) Use the M10 bolts and rollers (as shown on photos) to mount the frame (start with only one side).**
- 4) Follow the same procedure on the other side.**

Right side




Bolt M10 ID.5 +
washer M10 ID.7 +
dural. roller ID.10
(length 25mm) +
cover M10 ID.8

Bolt M10 ID.12 +
dural. protektor
insert ID.18 +
protector ID.16

Original bolt + dural.
roller ID.9 (length
39mm)

Bolt M8 ID11 +
washer M8 ID.17



Dural. roller ID.14 +
silentblock ID.15

Left side

Bolt M10 ID.13 +
dural. protektor
insert ID.19 +
protector ID.17

Bolt M10 ID.5 +
washer M10 ID.7 +
dural. roller ID.11
(length 23mm) +
cover M10 ID.8



Bolt M8 ID12 +
washer M8 ID.18

Bolt M10 ID.9 + dural.
roller ID.10 (length 13mm)

Dural. roller ID.15 +
silentblock ID.16

